

ES14

Enhance the teaching experience with
breakthrough technology.



The New ES14 Portable Launch Monitor.

- Ball Speed
- Club Speed
- Smash Factor
- Launch Angle
- Spin
- Distance

Come explore the next level in
Launch Monitor technology.



ERNESTSPORTS®
IMPROVING GOLF PERFORMANCE



ernestsports.com
855.354.4653

New ES14 App Features

Home Page



Range Session – Start new range sessions or join one that already exist

Session Logs – Allows the fitter to view old sessions that already exist.

Club Averages – Records sessions and gives you an average of each.

Settings – Allows you to change settings for Averages, Units, Distance type and links.

Tutorial – Visual tutorial on how to use the ES14 App.

ERNESTSPORTS[®]
IMPROVING GOLF PERFORMANCE



New ES14 App Features

Range Session



Alt. View 1
Circle format
with main
circle larger
number
displayed.

Connect phone with the ES14 via Bluetooth.

Select your club on the ES14, then place device on the ground (see **Positioning the ES14**). Select **Range Session** in the app, name session and begin.

Once finished, choose **End/Save Range Session** to end session.

After completion, view your saved data in **Session Logs**.

ERNESTSPORTS®
IMPROVING GOLF PERFORMANCE



New ES14 App Features


Range Session (cont')

To view your data in a different format, press the **View** button again.



Alt. View 2
Grid format with larger number displayed.

Alt. View 3
Active view display with a previous shots.

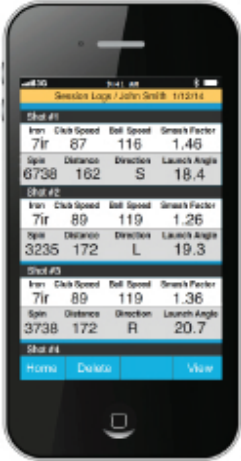

New ES14 App Features

Session Logs

This section of the app allows you to view data for individual range sessions.



Select the saved **Session Log** to view the shot data from the Range Session.

ES14 Settings

Welcome to the ES14 Launch Monitor functionality. For more information go to www.ernestsports.com

ES14 Basics



ES14 Settings

To Change Altitude: With power “on” press Program button. Altitude selection is displayed. Using the Up/Down buttons, change to desired altitude.

To Select Yards/Meters: Press Program button until UNT is displayed. Press Program button again and current setting will flash. Use Up/Down buttons to select yards or meters. Press Program button to save.


To Program Loft: Press Program button once. The current club will flash. Using the Up/Down buttons, select the club to program. Press the Program button once. The current degree setting will flash. Use the Up/Down buttons to set the loft degree. Press Program button to save.



Statistics to improve your game!



Club Speed

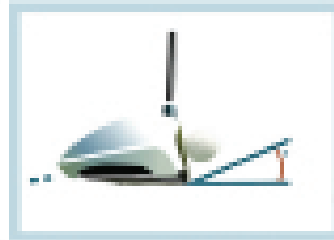

Launch Angle



Ball Speed



Smash Factor



Spin Rate



Distance

